
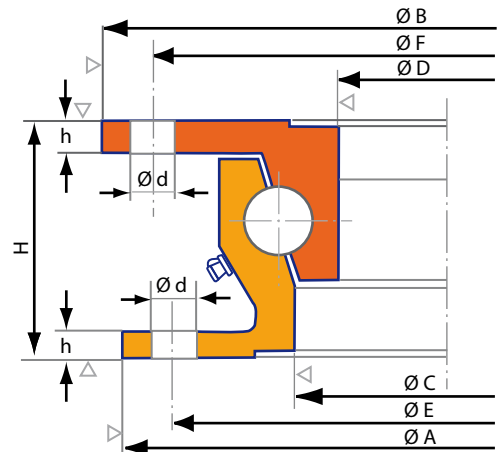
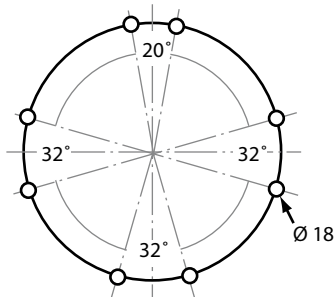


Baureihe HB-Standard für LKW-Anhänger, landwirtschaftliche Anhänger, Beregnungsmaschinen und Spezialfahrzeuge

einreihig

Oberring Bohrbild Unterring
8L (b)

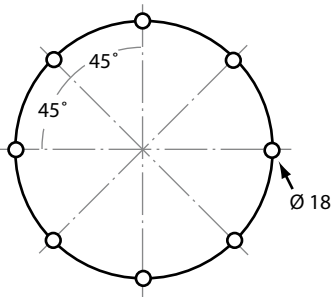

Typ	Ø A mm	Ø B mm	Ø C mm	Ø D mm	Ø E mm	Ø F mm	h mm	H mm	Gewicht (kg)	Axial- Last (t)	Bohrbild
HB 12/1000	1000	1008	877	846	960	974	10	90	73	7	-
HB 12	1100	1108	986	946	1060	1074	10	90	80	8	8L (b)
HB 18/1000	1000	1008	977	846	960	974	10	90	73	8	-
HB 18	1100	1108	977	946	1060	1074	10	90	80	10	8L (b)
HB 1000/22	1000	1008	877	846	960	974	10	90	73	10	-
HB 1100/22	1100	1108	977	946	1060	1074	10	90	79	12	8L (b)
HB 1100/24	1095	1108	977	946	1060	1074	10	90	80	12	8L (b)
HB 1200/22	1200	1208	1077	1046	1160	1174	10	90	87	13	8L (b)
HB 1300/22	1300	1308	1177	1146	1260	1274	10	90	94	14	8L (b)

Bitte beachten Sie unsere Einbau- und Wartungsanleitung

Helmut Buer GmbH & Co. KG
Am Leveloh 11
D-45549 Sprockhövel

Tel: +49(0)2324/90291-0
Fax: +49(0)2324/77 33-0
Email: info@buer-kg.de
Web: www.buer-kg.de